




Ultrasafe flat mop with strap tape system

Microfibre and polypropylene flat mop for R10/11 non-slip surfaces, with strap tape system support

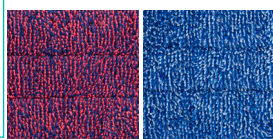

Technical information

code	notes	cm (comm. sizes)	C	pcs	kg	m³
0000H010R		↙ 40 ↘ 12		25	2,25	0,014
0000H010B		↙ 40 ↘ 12		25	2,25	0,014

SYSTEM

Flat mopping system with frame with strap tape system, to be used either pre-soaked, soaked on demand with soaking station or with handles with tank
Ideal for washing of non-slip or porous surfaces, suitable to remove ingrained dirt

GREEN BOX



EU Ecolabel Certificate



DECITEX of the fibres

Microfibre: 0,16 DTX - Polypropylene: 37,03 DTX



Efficient: microfibre requires less chemical to remove dirt and bacteria, reducing water and chemical consumption



01/07/25

Advantages

- **Easy:** mop changing is easy and quickly
- **Ergonomic:** it is the most lightweight system of TTS range
- **Effective:** the abrasive action of polypropylene removes easily dirt
- **Highest hygiene:** microfibre penetrates into the microporosity of the floor, collecting dirt and more than 95% of bacteria
- **Very low friction:** glides effortlessly on non-slip surfaces
- **Long durability:** high quality strap tape to ensure a long life of the mop

Material

Yarn: 50% polypropylene, 40% polyester, 10% polyamide - Support: polyester

Packaging: [click here to see the environmental labelling of packaging](#)

Warnings

Use alkaline detergents with a pH below 11

Washing conditions

Guidelines for proper fibre maintenance

Follow the washing instructions (temperatures and dosage) on the laundry detergent packaging

Perform a pre-wash in cold water without laundry detergent to remove any residual product used during cleaning operations

Recommended use of professional textile laundry detergent

Do not use fabric softener

Do not use laundry detergents with Ph > 11

The use of laundry nets is recommended to speed up and make laundry operations more hygienic

Specific mop instructions



Washing temperature max 90° C, recommended 60°




Bleaching possible, do not use chlorine




Tumble dry or in a dryer possible with low program



Related products



Velook frame



Velook frame with Block System



BIO Pro with strap tape system



BIO Basic with strap tape system