




Exon flat mop pockets system

Semi-disposable microfibre cloth for pockets system, packed

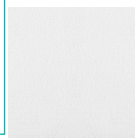

Technical information

code	notes	cm (comm. sizes)	cm (real sizes)	C	pcs	kg
00000772	1 pack with 35 pcs.	↙ 40 ↘ 13	↙ 42,5 ↘ 14	☐	12	8,1

SYSTEM

Flat mopping system with pockets, to be used either pre-soaked, soaked on demand with soaking station or with handles with tank
Ideal for environments with high risk contamination

GREEN BOX



DECITEX of the fibres

Microfibre: 0,53 DTX



Efficient: microfibre requires less chemical to remove dirt and bacteria, reducing water and chemical consumption

Analysis

Analysis of the mechanical action of the Exon flat mop alone revealed a 99.99% removal of bacteria and fungi present on the surface (test conducted by a specialised external laboratory adapting the UNI EN 16615:2015 standard).
The analysis of the mechanical action of the Exon cloth revealed a removal of Coronavirus 229E from steel surfaces of 99 % (test conducted by a specialised external laboratory)

Advantages

- **Semi-disposable:** either disposable or washable up to 10 times
- **Highest hygiene:** Microfibre penetrates the micro-pores in the floor, collecting dirt and 99.99% of bacteria
- **Easy:** mop changing is easy and quickly

Compatibility

Compatible with pockets system frames 40 cm

Material

Microfibre (100% polyester)

Packaging: [click here to see the environmental labelling of packaging](#)

Washing conditions

Guidelines for proper fibre maintenance

Follow the washing instructions (temperatures and dosage) on the laundry detergent packaging
 Perform a pre-wash in cold water without laundry detergent to remove any residual product used during cleaning operations
 Recommended use of professional textile laundry detergent
 Do not use fabric softener
 Do not use laundry detergents with Ph> 11
 The use of laundry nets is recommended to speed up and make laundry operations more hygienic

Specific mop instructions



Washing temperature max 60° C




Bleaching possible, do not use chlorine




Tumble dry or in a dryer possible with low program

Related products



Wet Disinfection frame



Blik frame